


SERIES 804 QDC PUSH-PULL
Mighty Mouse Connectors and Cables




Contact Layouts
Mating Face of Pin Insert Shown


SIZE #23 CONTACTS, TESTED AT 750 VAC



Insert Arrangement	5-3	6-4	6-6	6-7	7-10	8-13
No. of Contacts	3	4	6	7	10	13

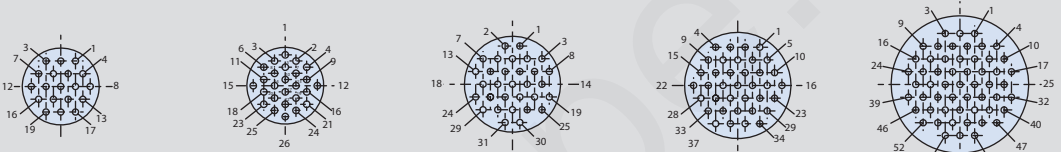

Insert Arrangement	9-19	10-26	11-31	12-37	14-55
No. of Contacts	19	26	31	37	55

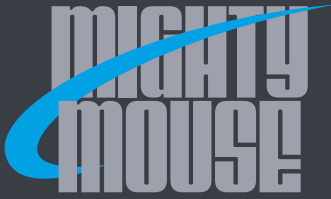


SERIES 804 QDC PUSH-PULL
Mighty Mouse Connectors and Cables




Contact Layouts
Mating Face of Pin Insert Shown

SIZE #20HD CONTACT ARRANGEMENTS, TESTED AT 1000 VAC

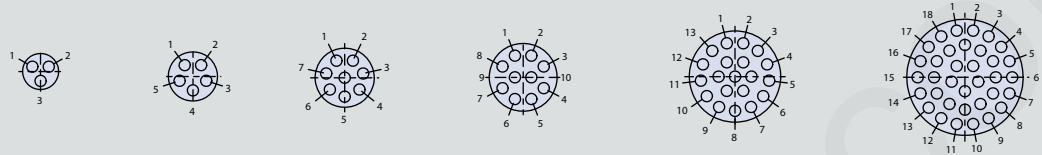


Insert Arrangement	6-23	7-25	8-28	9-210	12-220	14-235
No. of Contacts	3	5	8	10	20	35

SIZE #16 CONTACT ARRANGEMENTS, TESTED AT 1800 VAC

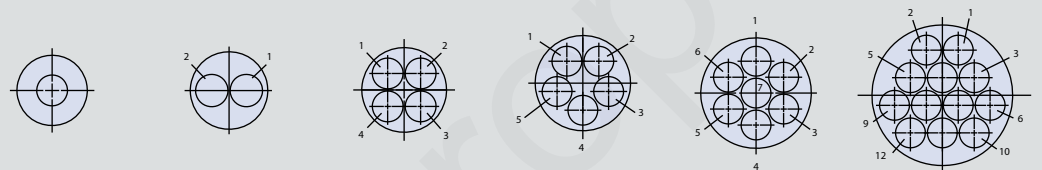

Insert Arrangement	6-1	8-2	9-4	10-5	12-7	14-12
No. of Contacts	1	2	4	5	7	12


SIZE #12 CONTACTS ARRANGEMENTS, TESTED AT 1800 VAC

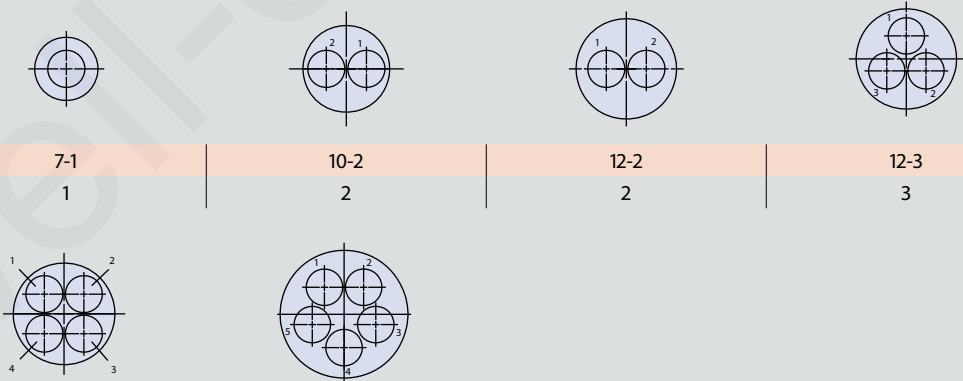

Insert Arrangement	7-1	10-2	12-2	12-3
No. of Contacts	1	2	2	3

Insert Arrangement	14-4	14-5
No. of Contacts	4	5

SERIES 804 QDC PUSH-PULL

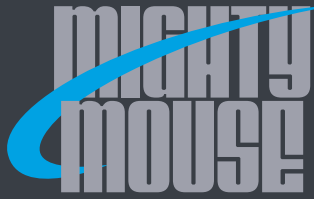

SERIES 804 QDC PUSH-PULL Mighty Mouse Connectors and Cables




Contact Layouts Mating Face of Pin Insert Shown

SIZE #20 AND SIZE #23, COMBO CONTACT ARRANGEMENTS, TESTED AT 750 VAC




Insert Arrangement	8-200		9-201	
Contact Size	#12	#23	#12	#23
No. of Contacts	2	4	2	8
VAC Test Voltage	750		750	

SIZE #16 AND SIZE #23, COMBO CONTACT ARRANGEMENTS, TESTED AT 750 VAC

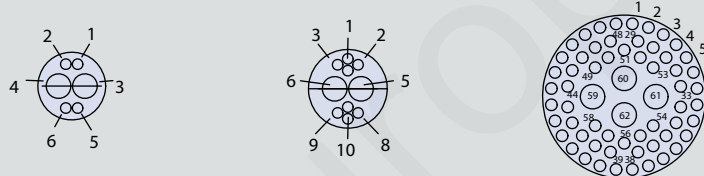


Insert Arrangement	9-200		10-202		15-206	
Contact Size	#16	#23	#16	#23	#16	#23
No. of Contacts	2	4	2	8	4	58
VAC Test Voltage	750		750		750	

SIZE #12 AND SIZE #23, COMBO CONTACT ARRANGEMENTS, TESTED AT 750 VAC

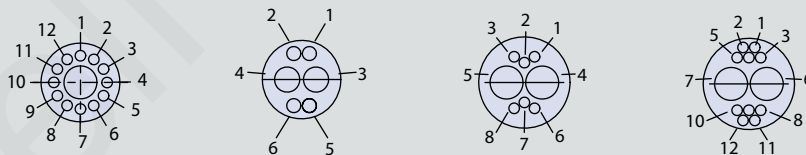


Insert Arrangement	10-200		10-201		12-200		12-201	
Contact Size	#12	#23	#12	#23	#12	#23	#12	#23
No. of Contacts	1	12	2	4	2	6	2	10
VAC Test Voltage	750		750		750		750	

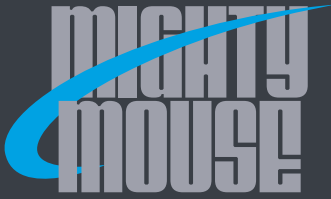

SERIES 804 QDC PUSH-PULL
Mighty Mouse Connectors and Cables
Contact Layouts
Mating Face of Pin Insert Shown




SIZE #16 AND SIZE #23, COMBO CONTACT ARRANGEMENTS, TESTED AT 1300 VAC

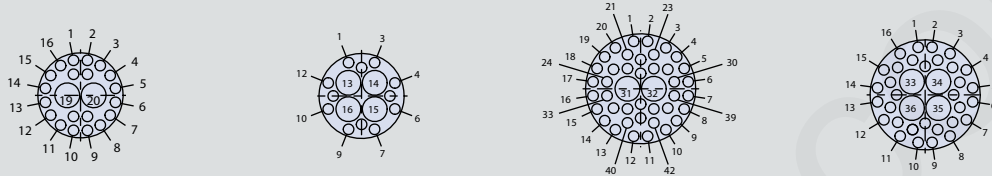


Insert Arrangement	12-202		12-203		14-204		14-205	
Contact Size	#16	#23	#16	#23	#16	#23	#16	#23
No. of Contacts	2	20	4	12	2	40	4	32
VAC Test Voltage	1300		1300		1300		1300	

SIZE #12 AND SIZE #23, COMBO CONTACT ARRANGEMENTS, TESTED AT 1300 VAC

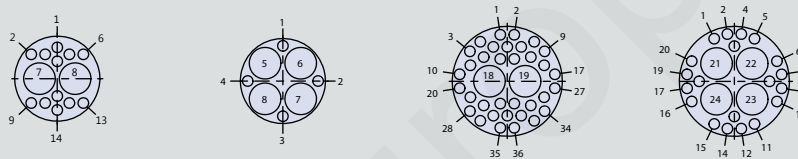

Insert Arrangement	12-204		12-205		14-206		14-207	
Contact Size	#12	#23	#12	#23	#12	#23	#12	#23
No. of Contacts	2	12	4	4	2	34	4	20
VAC Test Voltage	1300		1300		1300		1300	

SIZE #8 AND SIZE #23, COMBO CONTACT ARRANGEMENTS, TESTED AT 1300 VAC

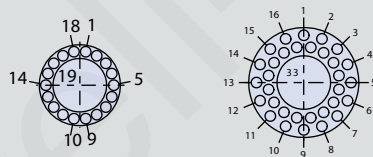

Insert Arrangement	11-201		14-208	
Contact Size	#8	#23	#8	#23
No. of Contacts	1	18	2	32
VAC Test Voltage	1300		1300	

SERIES 804 QDC PUSH-PULL